

OUTLANDER

BODY REPAIR MANUAL

FOREWORD

This manual has been prepared for the use of all service mechanics engaged in the body repair service. Body dimensions, welded panel replacement procedures, body sealing application instructions, and all the other information required to provide quick and accurate body repair service are contained herein. One especially important point is the welding method. All of the vehicle's original strength and durability can be maintained by following the welding procedures contained in this manual.

Note that, in order to maximize the efficiency of the repair work, first, both the extent of the damage and the replacement parts that are needed must be calculated accurately, and then the actual work must be performed accurately and efficiently.

The publications shown below are also available, and should be used in conjunction with this manual.

TECHNICAL INFORMATION MANUAL

INZE03E1CD
INZE04E1CD
INZE05E1CD
INZE06E1CD

WORKSHOP MANUAL

CHASSIS GROUP

CZNU03E1CD
CZNU04E1CD
CZNE05E1CD
CZNE06E1CD

BODY REPAIR MANUAL

PBAG9219

PARTS CATALOGUE

B606R507A_

Mitsubishi Motors Corporation reserves the right to make changes in design and specifications and/or to make additions to or improvements in its products without imposing any obligation upon itself to install them on its products previously manufactured.

GROUP INDEX

| | |
|------------------------------------|----------|
| GENERAL | 0 |
| BODY CONSTRUCTION | 1 |
| BODY DIMENSIONS | 2 |
| WELDED PANEL REPLACEMENT . | 3 |
| CORROSION PROTECTION | 4 |
| SYNTHETIC-RESIN PARTS | 5 |
| BODY COLOUR | 6 |
| REFERENCE MATERIAL | 8 |



**MITSUBISHI
MOTORS**

MANUAL DESCRIPTION

CONTENTS

The first page of this manual contains a table of contents which lists the name of vehicle models and groups within each model.

TEXT

The vehicles to which the information in the text pertains are generally designated according to their body classification. In some cases, other limiting designations such as model name, type of drive system, etc., are given. If there are no such limiting designations, the information can be assumed to cover all models.

PAGE NUMBERS

All pages are numbered consecutively within each model. The page number can be found on the upper left or right of each page.

SECTION TITLES

The group titles and section titles can be found at the upper center of each page.

