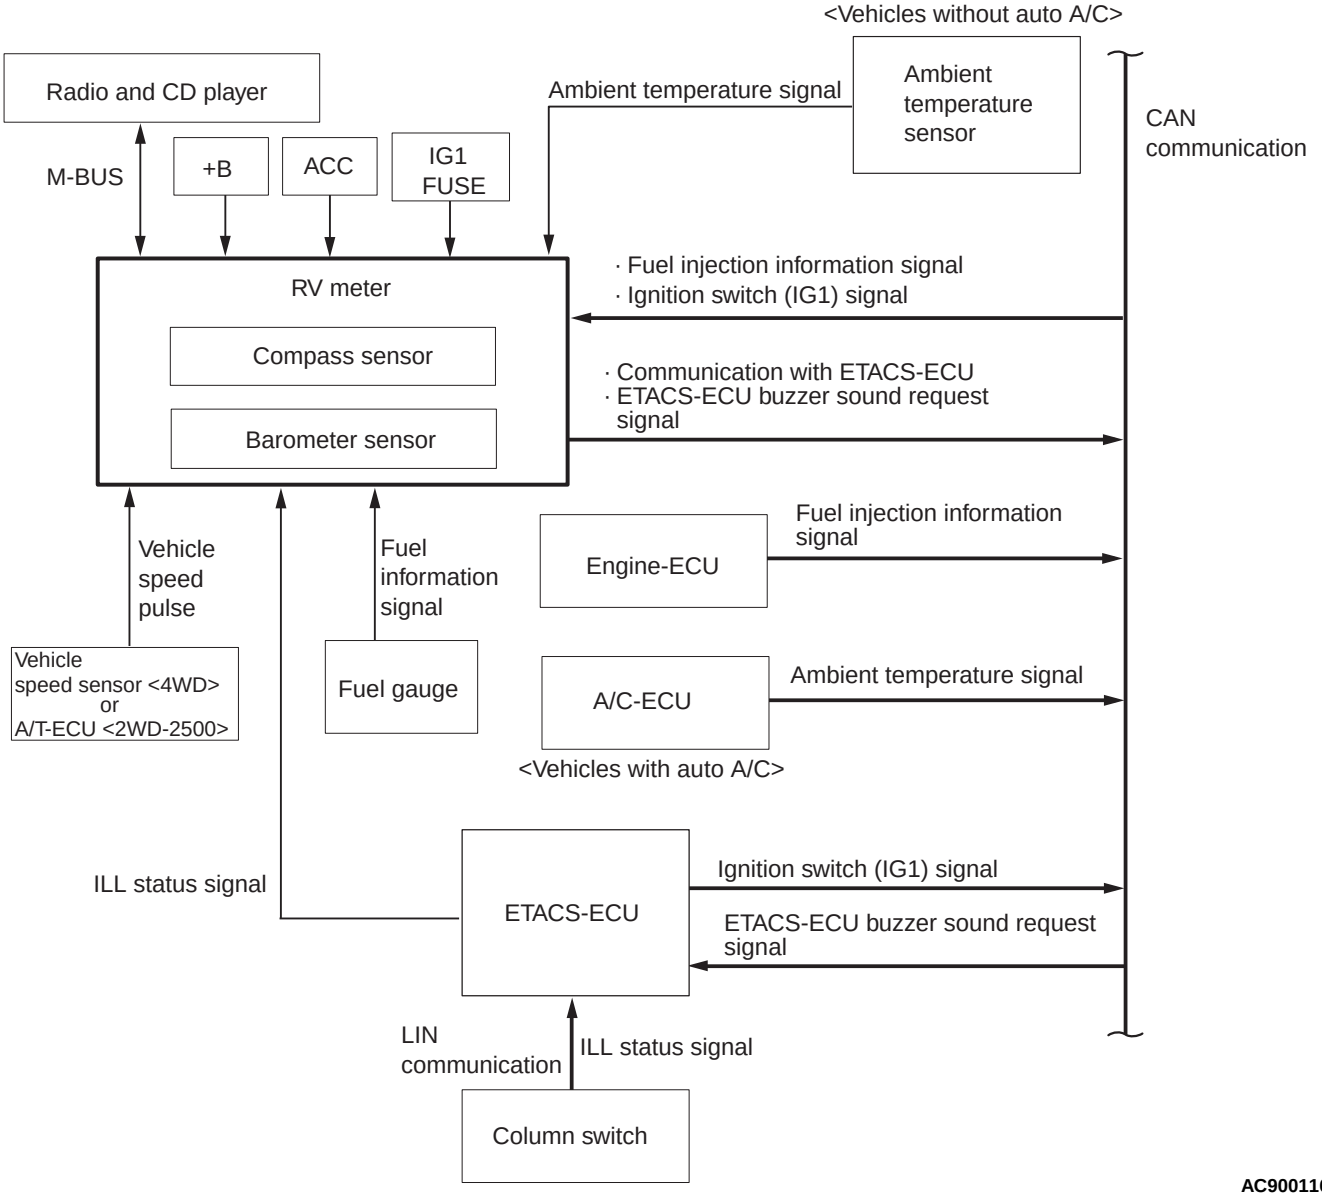
<Vehicles without auto A/C>
Radio and CD player
Ambient temperature signal
Ambient temperature sensor
CAN communication
M-BUS
+B
ACC
IG1 FUSE
RV meter
Compass sensor
Barometer sensor
· Fuel injection information signal
· Ignition switch (IG1) signal
· Communication with ETACS-ECU
· ETACS-ECU buzzer sound request signal
Vehicle speed pulse
Fuel information signal
Engine-ECU
Fuel injection information signal
Vehicle speed sensor <4WD> or A/T-ECU <2WD-2500>
Fuel gauge
A/C-ECU
Ambient temperature signal
<Vehicles with auto A/C>
ILL status signal
ETACS-ECU
Ignition switch (IG1) signal
ETACS-ECU buzzer sound request signal
LIN communication
ILL status signal
Column switch
AC900116AE